


Donning of a TeamMaster with Regulation Valve PT 120 L and Automatic Switch-over Valve

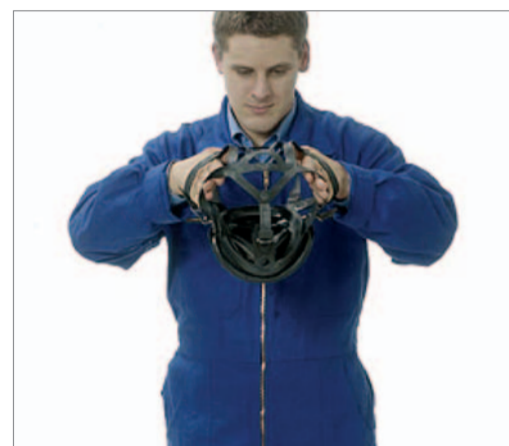

Put on full face mask, helmet and compressed air breathing apparatus.



Before donning open the valve of the cylinder and do the necessary functional tests.



Put your right foot into the right boot.



Put your left foot into the left boot.



Lift the suit up to the hip.



If your suit is equipped with a ventilation systems or a guidance line adapter...



... close and tighten the integrated hip belt at the closing clasp.



Connect the middle pressure hose inside the suit to the belt manifold of the automatic switch-over valve (ASV).



Put the right arm into the right sleeve.



Thereby put your head into the hood.



Put your hand into the glove.



Cover the breathing apparatus with the backpack.



Put your left hand into the left sleeve and glove.



Before closing the zipper connect the lung demand valve.



While closing the zipper you have to pay attention, that the blades of the zipper are parallel to each other and have no ripples.



Pull the pull strap only with the middle finger, so that you do not apply to much force.



If the closer system gets stuck, pull it a little bit backwards and try it again – ensure good lubrication.



By lifting the hood you can pull the blades parallel.



Close the cover flap with the velcro.



Connect the Regulation Valve PT 120 L to an external air source when necessary.